



File Name: car video audio navigation system user manual.pdf

Size: 1608 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 2 May 2019, 20:19 PM

Rating: 4.6/5 from 812 votes.

Status: AVAILABLE

Last checked: 11 Minutes ago!

In order to read or download car video audio navigation system user manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with car video audio navigation system user manual . To get started finding car video audio navigation system user manual , you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

car video audio navigation system user manual

Manual Please carefully read all of the information in this manual. Disc Player with Touch Screen Controls. WARNING! To prevent fire or electrical shock hazard, do not expose this product to moisture or remove non-serviceable parts inside. Refer servicing to qualified personnel. Index. Warnings and Cautions. Button Locations and Functions 4. Remote Control Button Locations and Functions 45. Basic Operation 56. System Setup. Language 6. Setting the Clock 67. Radio Setup 7. GPS Setup 7. Brightness Adjustment 7. System Setup 78. Calibration Setup 8. Audio Setup 8. Wallpaper Setup Background 8. Reset 9. Sound Controls Weather Band Operations 14. Disc Operation. Disc Warnings 14. Music Disc Operation 1516. MP3 Operation DISC, USB and SD CARD 1719. Movie Disc Operation 2023. Movie Disc Setup Menu 24. GPS Navigation. GPS Navigation Operation M4LCD Only 2534. Operation. Bluetooth Operation Bluetooth Operation 3537. Satellite Radio. Satellite Radio Setup 38. Satellite Radio Operation IPOD Operation 4446. Camera Operation Camera Operation 47. Auxiliary Inputs. Installation Replaceable Fuse Watching the display or operating the system will distract. In some states and countries, Do not mount the unit in a place where the cooling fan on the unit is blocked. Blocking these openings will. This product is designed. If the product is used with the improper system it may cause a fire. Magnadyne Corporation Caution. If the product needs to be repaired, Avoid places with too much. Do not backup your vehicle while looking at the monitor. Always look in the direction of your vehicle's motion. Use the monitor only as an aid in safety confirmation. The actual distance may be different than it appears in the. Always be aware that blind spots may exist and not appear. The product is intended to assist in safe driving and you, as the driver, are solely responsible. Do not use any features. Magnadyne will. Liquid Crystal Panel. Also, movement of the. Note that this is. Do not use the unit while these symptoms are evident. <http://www.dewoldensummersale.nl/uploads/bosch-logixx-easy-access-freezer-user-manual.xml>

- **car video audio navigation system user manual, car video audio and navigation system user manuals in italiano, car video audio and navigation system user manuals portugues, car video audio and navigation system user manuals, car audio video navigation system e12 manual, car video audio navigation system user manual, car video audio navigation system user manual youtube, car video audio navigation system user manual pdf, car video audio navigation system user manual download, car video audio navigation system user manual free.**

Instead, leave the unit standing for about an hour, and. Note Applying spray. Wiping the screen with an. Off. Press and release to switch to Navigation mode, Note Navigation only available on M4LCD. Notes This unit may not play all SD cards. The. Note This unit may not function with all MP3. Remote Control Button Locations and Functions Press and hold to turn the sub woofer On and Off. Press and release for scanning memorizes stations. Radio Press and the tuner will scan to the. Press and hold Music Disc Press to change to a lower or Movie Disc Press to change to a lower or Radio Selects AM1, AM2, FM1, FM2 and FM3 Loudness Press and hold button until "LOUD. ON" appears in the display to boost high and To deactivate, press and hold again until "LOUD OFF" Operations section for more information. Basics Operation. Turning On Turning Off Navigation mode, press and release again to Homepage Menu Is the initial or main screen where Accessing the Homepage Menu Homepage. The Homepage menu consists of Homepage screen. Pressing the. Note Since the M3LCD does not have the System Setup. System Setup provides special settings to finetune The System Setup Use the adjustment buttons on the screen to make changes. The default

setting is English and can notHomepage. Setting the Clock Time ContinuedMonth, Day, Hour and Min Minutes. Radio Setup. Press eitherAmerica 2, Japan, Russia or Europe radio area. Refer to the map on the screen for location ofHomepage. The M4LCD comes preloaded with the GPS software and is ready to use, no updating is necessary. Loading the GPS softwareNote The iGO folder in the SD card is the GPSPress eitherSystem Setup ContinuedB. The Effect buttons changes the way theAudio Setup. See "Sound Controls" section of this manual forWallpaper Setup Background ImageBMP format file as Wallpaper if desired. ResetVolumeDecrease the volume by pressing the side ofIncrease. Decrease. Equalizer Interface. Enter the Equalizer Interface from the majority of source menus. Equalizer

Presets. http://www.drapikowski.pl/uploaded/fck_files/file/bosch-logixx-easy-access-freezer-user-manual.xml

Press theEQ OFF, Pop, Rock, Metal, Dance, Electronic. Country, Jazz, Classical, Bluesy, Old, Operatic. Speech and UserDefine. PressNote 1 Each one of these predefined equalizerNote 2 To reset the predefined equalizer settings to factory specifications press and hold theLoudness. To boost high and low tones at low volumePress theTurning Off the Equalizer. To deactivate the graphic equalizer press theEqualizer Interface continued. Balance and Fader. Press theUse the,To activate the center speaker press thePressMute. The majority of source menu options have a. MUTE button. Pressing the MUTE button willPress again to restore theDimming the Screen. Pressing thePressing theWallpaper Setup Background ImageSelecting the Radio Source. Touch the HOME button to activate the HomepageSelecting the AM, FM or WB BandTuning in a Radio Station Using SeekManually Tuning in a Radio StationThen press the or button until the desiredHold. Memorizing Radio StationsFM1, FM2, FM3, AM1 or AM2 radio band. Automatically Store Radio StationsFM1, FM2, FM3, AM1 or AM2 radio band. The tuner will searchNote After the new stations are stored intoScanning Stored Radio StationsFM1, FM2, FM3, AM1 or AM2 radio band. To narrow the reception to only local strong station the radio must be switched from distant toFor weaker FM stereo stations selecting monoScanning for FM Radio Stations that. Broadcast Traffic AnnouncementsFM1, FM2 or FM3 radio band. Note The Traffic Announcement featureAlternative Frequencies AF Not available inScanning for FM Radio Stations AccordingFM1, FM2 or FM3 radio band. Information, Sports, etc.. The selected program type will be highlighted. Weather Band. The weather band is accessible from the RadioPress the power button to turn the unit on. Touch the HOME button to activate the HomepageHomepage screen. Touch the WB button and theNotesTouch any of the Radio Station Recall buttonsLabel side upHandlingMP3 car seats or dashboard. Disc Cleaning.

Use a dry, soft cloth to wipe the disc's surface. If theNever use solventsNote A disc may become somewhat scratchedPreparing New Discs with Rough Spots. A new disc may have rough edges on its insideTherefore, removeTo do this, press the sideDo not touchLabel side upDo not bend. Do not touchWipe the disc from. Do not bendthe center towardWipe the disc fromRough spots onRough spots onRough spots onBall point penRough spots onBall point penGeneral Operations. Gently insert the disc into the slot with the labelLabel Side UpFORCE it into the slot, as you may already haveSelecting the Disc Source. Touch the HOME button to activate the HomepageMusic Disc Track SelectionPress the l button to select a lower track. Press the l button to select a higher track. Tracks can also be selected by using the remoteFor example If you want to play track 8, pressPausing a Music DiscPress the ll button to pause the disc. Press itStopping a Music DiscPress the button to stop the disc. To resumePress the button 2 times, then press the llThe unit's default setting is to repeat the entireTo repeat a music disc trackRandom Music Disc Track Play OrderPLAY" appears in the display. Press theEjecting a Music DiscGeneral Operations. Disc Gently insert the disc into the slot with the. Label Side UpNote If a disc does not autoload, DO NOT. FORCE it into the slot, as you may alreadySD Card Gently insert the SD card into theNote If a card does insert, DO NOT FORCE itNote If a drive does insert, DO NOT FORCESelecting the SD, USB or Disc Source. Touch the

HOME button to activate the. Homepage screen. Touch the SD, USB or DiscRevealing the Home ButtonFolders. MP3 Interface Screen. The MP3 media CD, SD card or USB flash driveNote If an icon can not be select the unit hasFile SelectionNote If your file does not appear on the screenMethod 2 Using the Control PanelTouch thePress the | button to select a higher file. PausePress the || button to pause the disc.

“PAUSETouch the || button again to resume play.Photos. VideoStopPress the button to stop play. To resumePress the button 2 times, then press the ||DisplayPress the OSD button for the following. Display Off. Repeating a File. The unit’s default setting is not to repeat. To repeat a fileRandom File Play OrderThe files will play in random order. To cancelEjecting a Disc. Press theRemove a USB device or SD card at any time byLabel Side Up. General Operations. Gently insert the disc into the slot with the labelFORCE it into the slot, as you may already haveSelecting the Disc Source. Touch the HOME button to activate the HomepageMoving Vehicle WarningMenu ScreenNote Pressing the DVD MENU button on thePress the || button to pause the movie disc.To resume playing the disc, press the || button.Stopping a Movie DiscPress the button to stop play. To resume play,Press the button 2 times, then press the ||Press the | button to select a previous chapter. Press the | button to select a next chapter. Touch the screen to activate the control buttonPress and hold the | or | button again willHold. Audio LanguageTitle ScreenSubtitle Language MenuThe selection of subtitleAngle View SelectionThis is not a malfunction. Zoom SelectionEach time theOn Screen Display SelectionTitle Elapse, Title Remain, Chapter Elapse. Chapter Remain and Display Off.Direct Chapter SelectionSelect the numbers keys to directly selectScreen Adjustment ControlsNote Press the RESET button to return theContrast. Saturation. Sharpness. Hue. Slow MotionPress theNote To access the Movie Disc Setup Menu, a movie disc has to be inserted. Movie Disc Setup MenuSystem Setup PageLanguage Setup Page. French, Portuguese or Italian. Audio Setup PageSpeaker Setup Page. Digital Setup Page. MonoPress the power button to turn the unit on. Selecting the GPS Navigation System. Direct Selection. Press and release the button from anyNote Pressing the button again will returnHomepage Selection. Homepage screen.

Touch the GPS button toNavigation Menu. The typical way of using the navigation system isThis way you doNavigation Settings. You can configure the program settings, andTouch the Settings icon in the Navigation MenuSettings Menu 1 of 2Safety Mode.Press theGPS EnabledPress the. Menu.Map FeaturesPress to open thePress to open the quick menu.Touch the Screen to Reveal More FeaturesNoteTouch this button to movePress and holdNote In 3D mode these buttons are predefinedPress and hold to set theSelecting the Destination of a Route. Selecting the Cursor as the DestinationTouch the SetThe route is thenEntering an Address or Part of an Address. If you know at least a part of the address, it isEntering an Address or part of an AddressTouch the SetThe route is thenIf you know at least a part of the address, it isEntering a Zip Code ContinuedAutomaticallyTouch to confirm the city. Next select the Street Name”Done button.Touch the SetThe route is thenA destination can also be selected by using theMaking a DetourSaved Search Criteria DetourSaved Search Criteria Detour ContinuedRemove Via button and your detour will disappear. Direct Selection DetourNote To delete this detour touch the Detour button and select the Delete Avoids button and yourRoute Menu. Touch the Route icon to save, load and edit yourTouch one of theYou can moveManage MenuModify POI visibility settings.Saved Search Criteria.Selecting the Bluetooth Source. Touch the HOME button to activate the HomepageBluetooth interface. Pairing Bluetooth DevicesNote 2 If the Bluetooth mobile phone is alreadyMaking CallsAnswering CallsEnding a Call. Touch theConnecting an Already Used PhoneIf you want to connectLast Phone Number RedialMissed.Note If you want to delete a phoneCalls Received. Calls Missed. Delete a Phone. NumberPhone BookBluetooth MusicNote The vehicle must be equipped with an optional satellite tuner SXV100 in order to receive a satellite signal. If the tuner is not activated, call 18666352349 to activate.

The Tuner ID Number SID is required during Follow the steps below to access the Tuner ID Number SID. Accessing the Tuner ID Number SID Homepage screen. Touch the Satellite button Please note that satellite radio signal may be blocked by trees, buildings or other obstacles. Information display during reception. CHECK ANTENNA When an antenna issue exists. ACQUIRING SIGNAL When a channel is being tuned in no signal is yet received. CHANNEL NOT AVAILABLE A channel without a broadcast has been selected or the receiver may not be activated. CALL 18666352349 TO SUBSCRIBE A channel not covered by your contract or the tuner is not activated. Call Sirius Service Center 18666352349 or visit them online at www.siriusxm.com. Channel Selection Modes. Channels are selected by the following methods Manual Tuning ENTER button. For example For Sirius. Channel 121, press 1, 2, 1 and then press Channel Selection Modes continued Category The Category can also be selected by touching ENTER button to return to the main satellite Category Programming Preset Satellite Channel PRESET button to access the preset channel Preset Number The channel will now be displayed on the SIR 3. Press the SIR BAND button to access Recalling Preset Channel Channel menu. Recalling Preset Channel continued Note Additional channels can also be recalled SIR 3. Press the SIR BAND button to access Skipping a Channel Skipping a Channel continued Reinstating a Skipped a Channel. Select the channel to be reinstated by highlighting the channel. Press the General Operations Selecting the IPOD Source. Press the HOME button to select the source IPOD source. IPOD Interface Navigation touch the screen. Note The IPOD interface does not allow for Track Controls. Touch the screen to activate the track controls. Press the | button to select a previous Press the | button to select a next track. Press the button to fast rewind track. To resume normal playback speed press Press the | button to fast forward track.

To resume normal playback speed press Press to access Navigation Controls. Navigation Controls. Touch the screen to activate the track controls. Press the Press the button to scroll up through the Click Wheel. Press the button to scroll down through IPOD's Click Wheel. Navigation Controls. The OK button has the same operation as. This button has the same operation as the. MENU button on an IPOD. Press to access Track Controls. Browse for a Song Browse for a Song continued Automatic Camera Selection. Rear View Camera. The rear view camera will automatically activate when the ignition key is turned "On" and the vehicle Side View Cameras Left and Right if equipped. The side view cameras will automatically activate when the ignition key is turned "On" and the vehicle's The video image from the camera will appear on the screen. Note Side view cameras do not have audio. Front View Camera. The front view camera can not be automatically activated. The front view camera can only be manually Note Front view camera does not have audio. Note Automatically activated camera views have priority over manually selected camera views. For instance When a vehicle is put into reverse gear the rear camera view will automatically be displayed Manually Selecting the Camera View Homepage screen. Press the Then press the. Camera button to select the camera source Rear by pressing the button associated with Auxiliary Input 2 AVIN2 Connect an auxiliary Homepage screen. Then press the AVIN1 or Note The unit will not control the auxiliary Moving Vehicle Warning. If the vehicle is moving, this screen will be displayed. The sound of the source can be heard. Once the vehicle is stopped and the parking Menu Screen. Press the AUXIN1 or AUXIN2 button to select The display will indicate AV1 Front Input. AV2 Rear Input. Step 1 The radio chassis is designed to be "Sleeve Mounted" through an opening in the dashboard panel. Cut or engage an opening in the Step 2 Insert the mounting sleeve into the opening in the dashboard.

Bend the metal tabs on the sleeve Step 3 Bring all wiring for the connection of the unit including the antenna through the center of the Sheet Metal. Screw. Nut. Washer. Metal Strap. Dashboard. Mounting Sleeve. Removing the Unit. To remove the radio after installation, insert the removal keys straight back until they click. Push the Note If the removal keys are inserted at an angle they will not release the radio. Insert Removal. Keys Here Left. Front. Speaker. White Wire. Gray Wire. Brown Wire. Right. Center. Channel. Subwoofer Optional. Left. Rear. Speaker Violet Wire. Speaker This unit

for use only with a 12 Volt DC power source with a negative ground. Black Wire Ground. Orange Wire Parking Brake Switch . Infrared Remote Sensor IPOD Cable. RV5HAR6 Optional Blue Wire. Power Antenna 12V Out. Audio Input Left White. Audio Input Right Red. Video Input Yellow. External TV Receiver SiriusXm. Antenna SiriusXm. Vehicle Tuner External Automotive. Type Antenna Optional GPS Antenna Video Output Red. Video Output Green. Video Output Blue. Sync Brown. RGB Monitor Optional. Audio Output Left White. Audio Output Right Red. Video Output Yellow. TV Monitor Optional. Note Audio Output is not Video Output Yellow. Video Second Monitor Optional Camera. Harness. C125 Front C125 Rearview CSDR Right Side. CSDL Left Side The LCD display may fail to function normally Replaceable Fuse. If the fuse should blow, check that the wiring is Replaceable Fuse. Rear SD Card Holder SD Card This warranty and. Magnadyne Corporation or its authorized agent's obligations hereunder do not apply where Magnadyne Corporation or any of its authorized agents will Such cost are the sole responsibility of the purchaser.

This warranty does not cover the cabinet appearance items or accessories used in connection with this product, or any damage to recording or recording tape, or any damage This warranty gives Such modifications could void the User's Defective merchandise should be returned to the original point of purchase or Return Authorization must be obtained before sending, or merchandise may be refused. Magnadyne Corporation. Rev. A 5211 This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions FCC Caution Any changes or modifications not expressly approved by the party responsible for compliance PDF Version 1.7. Linearized Yes. Create Date 20110502 1551050700. Creator Adobe InDesign CS5 7.0.3. Tagged PDF No. Creator Tool Adobe InDesign CS5 7.0.3. Page Image Page Number 1, 2. Page Image Format JPEG, JPEG. Page Image Width 256, 256. Page Image Height 256, 256. Page Image Binary data 9347 bytes, use b option to extract, Binary data 9934 bytes, use b option to extract. Instance ID uuid006e1106739840b4b5ee991994fdc238. Document ID xmp.did51388DCC1420681180839E75796FB762. Original Document ID xmp.did85C6260118216811871FDF4628DAAC81. Rendition Class proofpdf. Derived From Instance ID xmp.iid0CEC5CCB1420681180839E75796FB762. Derived From Document ID xmp.did85C6260118216811871FDF4628DAAC81. Derived From Original Document ID xmp.did85C6260118216811871FDF4628DAAC81. Derived From Rendition Class default. Doc Change Count 40428. Producer Adobe PDF Library 9.9. Trapped False. Page Count 57. Before using this product, please read this manual fully to ensure correct operation. Keep the manual at hand for future reference. Always operate the vehicle in a safe manner and in full compliance with speed limits, road safety signs and all Always remain aware of driving conditions at all times when using this system while operating a motor vehicle.

Operation of this unit, including its camera, navigation, audio and other features, can be distracting to your While the system is intended to provide both entertainment and helpful It is up to you to minimize or prevent such Learn how to use this system before placing the vehicle in operation. Minimize the amount of time spent Do not attempt to Instead, pull off the road in a safe In the event of serious malfunction, disable the unit turn power off or remove power from the system and Your optional navigation feature is intended to assist you with guidance to your destination. The navigation For safety, pull off the road before making any adjustments to the If your Infotainment Center includes optional navigation features please refer to your navigation user manual Read the operating instructions for the Infotainment Center and all other components of the system carefully Observe the following warnings when using this unit. The driver should neither watch the display nor operate the system while driving. Watching the display or operating the system will distract the driver from looking ahead of the vehicle Always stop the vehicle in a safe location and use the parking brake before While navigating please use voice prompts. Use the proper power supply. This product is designed for operation with a negative grounded 12 V DC battery system. Never operate this product with other battery systems, especially not with a 24 V DC battery system.

Protect the DVD loader mechanism. Do not insert any foreign objects into the slot of this unit. Only insert appropriate CD or DVD. Do not disassemble or modify the unit. Do not disassemble or modify the unit, or attempt to repair the product yourself. This may causeIf the product needs repair, consultDo not use the unit when it is out of order. If the unit is out of order no power, no sound or in an abnormal state has foreign objects in it, isRefer installation to qualified personnel. USAFederal Communications Commission FCC.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditionsThis equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to. Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmfulThis equipment generates, uses, and can radiate radio frequencyHowever, there is no guarantee that interference will not occur in a particularAny changes or modifications not expressly approved by the party responsible for compliance could void theYour Infotainment Center is designed to only display video when the parking brake is fully engaged. Never attempt to circumvent, defeat or bypass any of these safety features. These designs areFailure to use the safety features as designed could lead to serious injury, death and propertyNotes on Use Liquid Crystal Panel. Do not cause impact to the liquid crystal panel. Only use your finger to gently touch the LCD panel. Do not touch the liquid crystal fluid if the LCD is damaged or broken. The liquid crystal fluid may beIf the liquid crystal fluid from LCD contacts your body or clothing,When the temperature is very cold or very hot, the image may appear unclear or may move slowly. In order to protect the liquid crystal panel, keep it out of direct sunlight while the unit is not in use. Sudden changes in the temperature inside the vehicle such as those which occur immediately afterDo not use the unit while theseTo clean the monitor, wipe only with a dry silicone cloth or soft cloth. Do not use a stiff cloth orYour Infotainment Center has been designed specifically for use in Recreational Vehicles. This system has been designed to offer a rich and intuitive feature set that is simple to useWe have engineered this system based off input from real RV'ersWe want your feedback. Do you have comments on your Infotainment Center QuestionsSend us a note or talk to one of our. Infotainment Specialists and give us your comments.

You can find our contact information atProduct Registration. Please take a moment to fill out your Infotainment Center Registration Card and mail it toBy registering your product you will be kept up to date on any enhancements to the. Infotainment Center. It will also help us expedite any service or support needs you mayRiver Park Inc.Elkhart, IN 46516For Technical and Warranty questions please contact our Technical Department at theFeatures. 7. Main Unit Display. 8. Setup. 10Motorized 6.95" Touch Screen LCD Display. Picture in Picture PIP Display. GPS Navigation Optional. SIRIUS Satellite Radio Ready. Bluetooth HandsFree Calling and Streaming Audio Player A2DP2. Rearview Camera Connectivity3. Auxiliary Monitor Support4. USB Input. ESPElectronic Shock Protection for DVD, MP3, CD. High Power MOSFET Speaker Output 4 X 50W. Steering Wheel Control Compatible. Premium Remote Control Optional Accessory. Compatible mobile phone required. Auxiliary monitor sold separatelyThe buttons located on the Infotainment Center front display are assigned the same reference here below.Mode Main MenuVolume UpNavigation. Eject.